



ergonomics

Anleitung
Instructions
Handleiding
Istruzioni
Instrucciones
Инструкции



Art.No.:
390 903

„Anorak“



- Ⓢ DE Druckknöpfe
- Ⓢ EN Press fasteners
- Ⓢ FR Boutons pression
- Ⓢ NL Drukknopen
- Ⓢ IT Bottoni a pressione
- Ⓢ ES Botones de presión
- Ⓢ TR Çit çit baskili
- Ⓢ RU Кнопки
- Ⓢ CZ Patentky
- Ⓢ HU Patent
- Ⓢ PL Napy
- Ⓢ SI Pritiskaci

Art.No.:
673 136



12 mm



15 mm



20 mm






www.prym.com
info@prym.com

Lochen
Punching
Percer
Ponsen
Punzonatura
Perforar
Перфорация



STEP 1
Verarbeiten
Processing
Traitement
Verwerking
Elaborazione
Procesamiento
Обработка

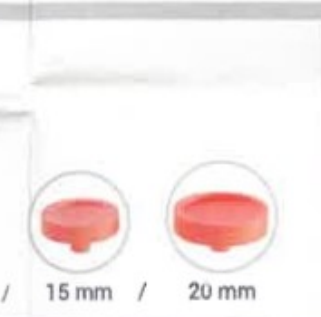

STEP 2
Verarbeiten
Processing
Traitement
Verwerking
Elaborazione
Procesamiento
Обработка

